


Owner's Manual

PB559X
PB779X

Super Blue

Super Blue

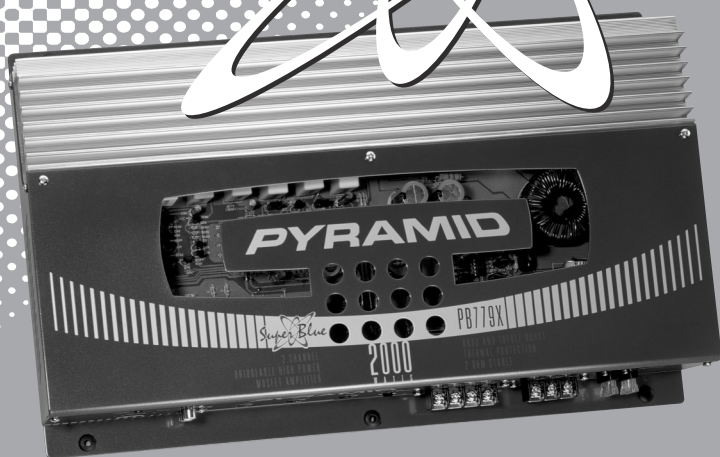

PYRAMID

introduction

Congratulations on your purchase of a new Pyramid Super Blue amplifier. Super Blue amps are some of the most advanced car amplification products available. These quality audio products are designed and engineered to afford you years of uncompromised musical service. Pyramid has utilized the latest electronic technologies in order to deliver a superb listening experience.

The Super Blue line has been designed to ensure adequate headroom for even the most demanding peaks and dynamic ranges found on today's CD's and recordings. Used properly, these amplifiers will provide you with years of listening pleasure.

table of contents

Introduction	i
Table of Contents	i
Specifications	1
Features and Controls, 2 ch amp PB559X, PB779X	2
Mounting and Installation	4
Electrical Connections	5
Stereo Input Connections, 2 ch amp PB559X, PB779X	6
Mono Input Connections, 2 ch amp PB559X, PB779X	7
Speaker Connections, 2CH & Bridged mode, PB559X, PB779X	8
Troubleshooting	9

PYRAMID




2 ch amp PB559X• PB779X

specifications

	PB559X 2 ch amplifier	PB779X 2 ch amplifier
output power @14.4 V.D.C 1 KHz		
Maximum Power Output	800W x 2	1000W x 2
RMS Power Output @ 4 ohms	240W x 2	300W x 2
bass/treble control	yes	yes
subwoofer crossover	no	no
bridged mode	1600W x 1	2000W x 1
frequency response	10-30 KHz (±3dB)	10-30 KHz (±3dB)
input impedance	20 K-Ohms (low) 100 Ohms (high)	20 K-Ohms (low) 100 Ohms (high)
input sensitivity	250 mV (low) 2.5 V (high)	250 mV (low) 2.5 V (high)
power supply voltage	DC 14.4V negative ground (10.5-16V)	DC 14.4V negative ground (10.5-16V)
matching speaker impedance	2-8 Ohms	2-8 Ohms
maximum current draw	25 A	30 A
dimensions (W x H x D)		
mm	413 x 57 x 271	438 x 57 x 271
inches	16.25 x 2.25 x 10.67	17.25 x 2.25 x 10.67
net weight		
kg	4.1	4.3
lbs	9	9.46

2 ch amp PB559X • PB779X

features and controls

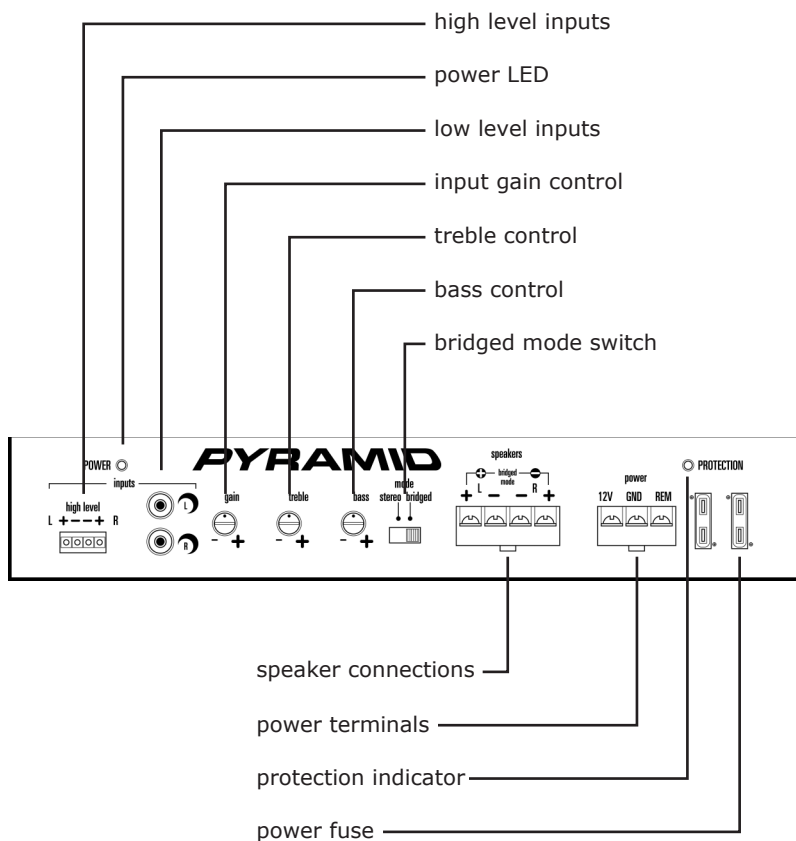

PYRAMID

high level inputs if your car stereo does not have RCA output jacks, you can connect the speaker output from the stereo system to the amplifier.

power LED this indicator is illuminated when power is applied.

low level inputs this amp features gold-plated RCA input jacks for high impedance input. Use these with car stereo output which uses RCA-type connector cables.

input gain control use this control to match the outputs of your head unit to the amplifier. Starting with your head unit volume control set at about the 2 o'clock position, increase the amp gain control until distortion begins to occur, and reduce slightly from this point.

treble control use the control to adjust the treble output level to suit your taste or audio program material.

bass control use the control to adjust the bass output level to suit your taste or audio program material.

bridged mode switch the amplifier can be bridged to form a high-power one channel unit. Make sure that the speaker system on the bridged channel is capable of handling the rated power and is of the proper impedance.

speaker connections these terminals are 14K gold plated to guarantee high conductivity and minimum signal loss.

power terminals use these connectors to deliver power, ground, and remote turn-on control to the amplifier.

protection indicator if the amplifier is incorrectly wired or not matched to the speaker system, the protection indicator will come on and the amplifier will turn off. Disconnect the power wire to reset the amplifier.


power fuse the fuse protects the amplifier and your car's electrical system from short circuit conditions.

mounting and installation

Please read the Installation Precautions section below before installing your Pyramid Super Blue amplifier, and then refer to the diagrams provided to connect power, audio input and speaker connections according to your own system configuration requirements.

Installation Precautions


- Before you drill or cut any holes, investigate your car's layout very carefully. Take care when you work near the gas tank, fuel lines, hydraulic line and electrical wiring.
- Do not operate the amplifier when it is unmounted. Attach all audio system components securely within the automobile to prevent damage, especially in an accident.
- Do not mount this amplifier so that the wire connections are unprotected or in a pinched condition, or likely to be damaged by nearby objects. Be sure to select a location inside your vehicle which has adequate ventilation.
- Before making or breaking power connections in your system, disconnect the vehicle battery. Confirm that your head unit or other equipment is turned off while connecting the input jacks and speaker terminals.
- If you need to replace the power fuse, only replace it with a fuse identical to that supplied with the system. Using a fuse of a different type or rating may result in damage to your system which isn't covered by the manufacturer's warranty.

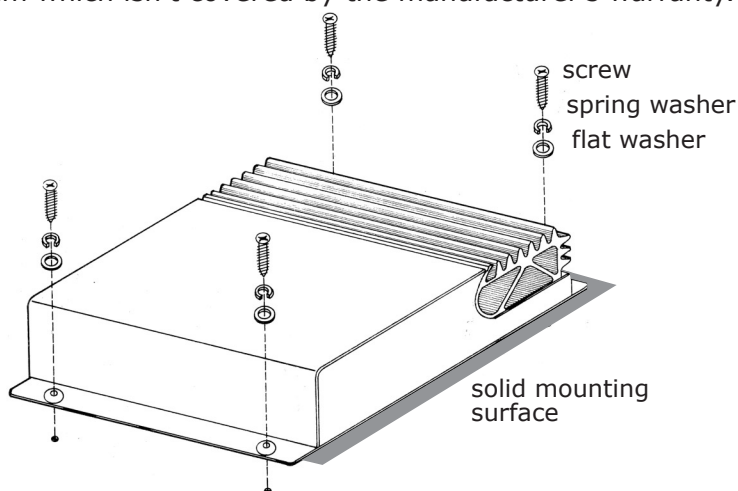

2 ch amp PB559X • PB779X


electrical connections

PB559X • PB779X

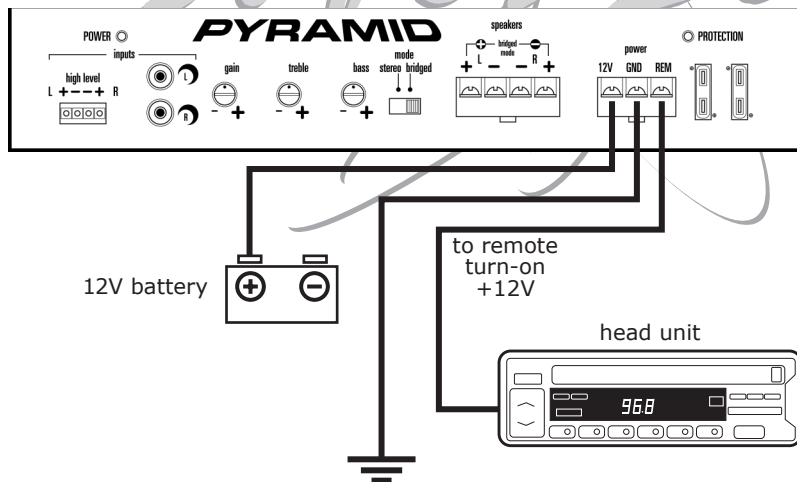


stereo input connections

using low level inputs

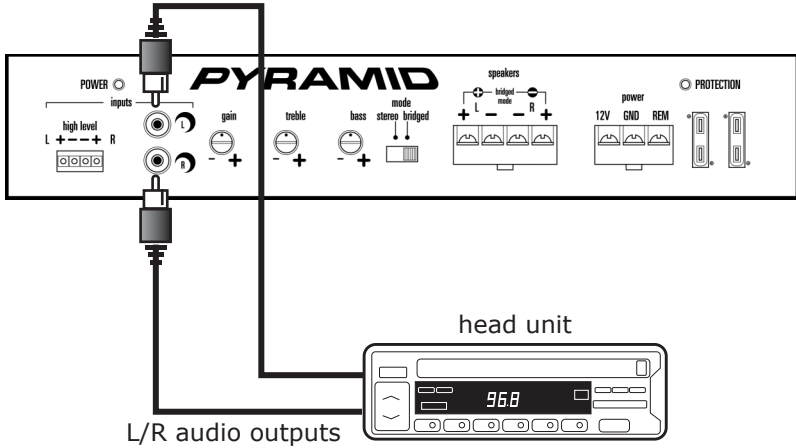


using high level inputs

PLEASE NOTE! If using high level inputs, do not use the low level RCA inputs at the same time!

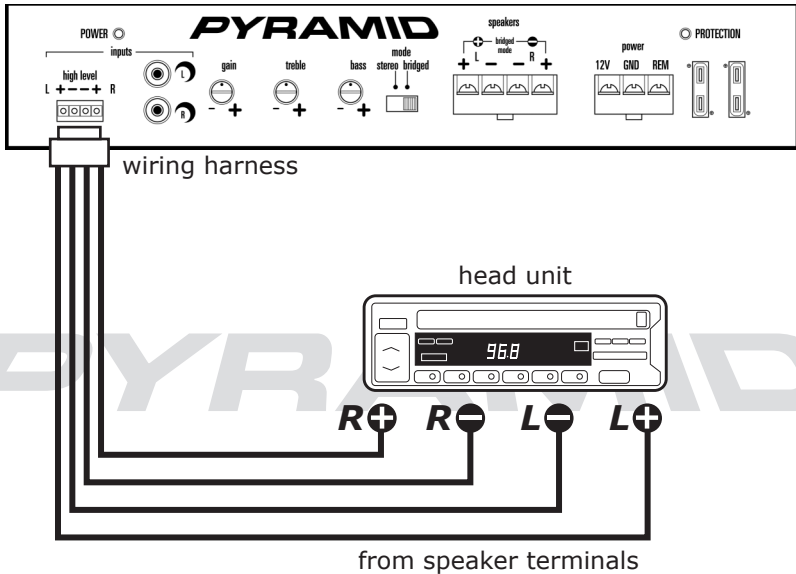


mono input connections

using low level inputs

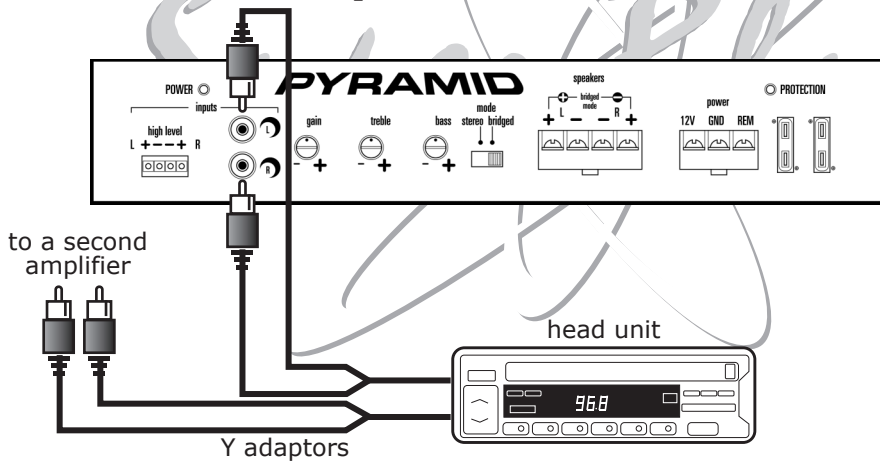

using high level inputs


PLEASE NOTE! If using high level inputs, do not use the low level RCA inputs at the same time!

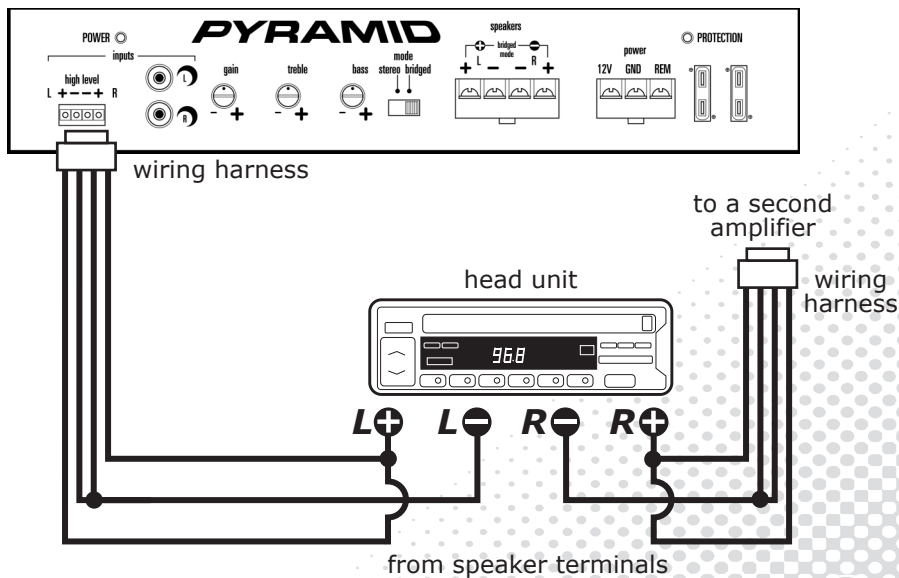


2 ch amp PB559X • PB779X

speaker connections

stereo output mode

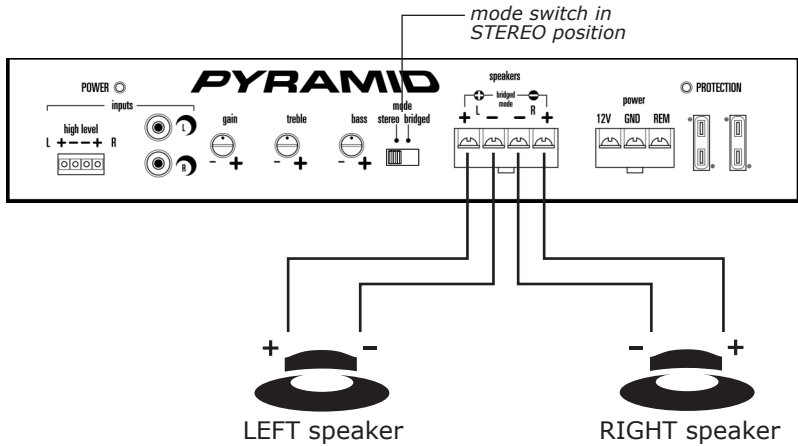

bridged mono output mode

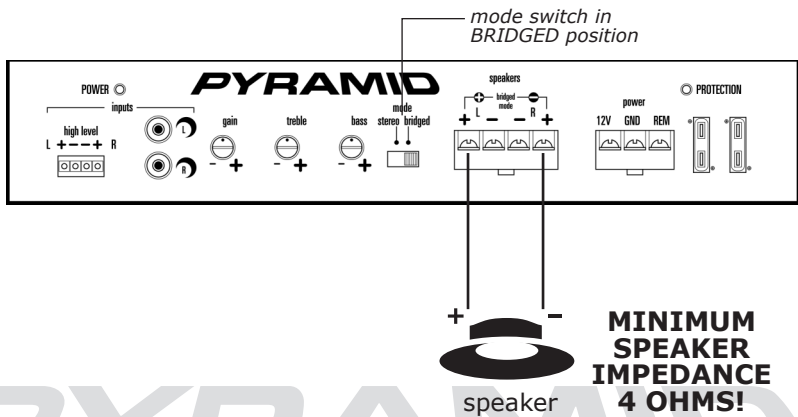

troubleshooting

Before removing your amplifier, refer to the list below and follow the suggested procedures. Always test the speakers and their wires first.

Amplifier will not power up.

- Check for good ground connection.
- Check that remote DC terminal has at least +12v DC.
- Check that there is battery power on the + terminal.
- Check all fuses.
- Check that Protection LED is not lit. If it is lit, shut off amplifier briefly and then repower it.

High hiss or engine noise (alternator whine) in speakers.

- Disconnect all RCA inputs to the amplifier(s) – if hiss/noise disappears, then plug in the component driving the amplifier and unplug its inputs. If hiss/noise disappears, go on until the faulty/noisy component is found.
- It is best to set the amplifier's input level as insensitive as possible. The best subjective S/N ratio is obtainable this way. Try to drive as high a signal level from the head unit as possible.

Protection LED comes on when the amplifier is powered up.

- Check for shorts on speaker leads.
- Check that the volume control on the head unit is turned down low.
- Remove speaker leads, and reset the amplifier. If the Protection LED still comes on, then the amplifier is faulty.

Amplifier(s) gets very hot.

- Check that the minimum speaker impedance for that model is correct.
- Check for speaker shorts.
- Check that there is good airflow around the amplifier. In some applications, an external cooling fan may be required.

Distorted sound

- Check that the Level control(s) is set to match the signal level of the head unit.
- Check that all crossover frequencies have been properly set.
- Check for shorts on the speaker leads.

High squeal noise from speakers.

- This is almost always caused by a poorly-grounded RCA patch cord.

MANUFACTURER'S LIMITED TWO YEAR WARRANTY

PYRAMID SOUND CORP. warrants this unit to be free from defective material or workmanship and will repair or replace this unit or any part thereof if it proves defective in normal use or service within two (2) years from the date of original purchase.

Our obligation under this warranty is limited to repairing or replacing, at our discretion, the defective instrument or any part thereof when it is returned, transportation prepaid to the Pyramid Service Center at the address below. This warranty will be considered void if the unit has been tampered with, improperly serviced, subjected to abuse or misuse or if installed in a commercial vehicle. This warranty does not cover accidental damage. When returning this unit for service, please include \$20.00 for return postage and handling. Send your unit to:

**PYRAMID SERVICE CENTER
1600 63rd Street
Brooklyn, New York 11204**

IMPORTANT: Pack carefully in original carton if possible. We are not responsible for damage incurred in returning items for repair. A letter stating your exact street address, daytime phone number, and the problem you are experiencing should be included. You must also enclose a copy of the original receipt as proof of date of purchase.

FOR YOUR PROTECTION

Completely and immediately mail the Product Registration Card so that we may contact you directly in the event a safety notification is issued in accordance with the 1972 Consumer Product Safety Act, or for other reasons Pyramid may deem necessary.

TECHNICAL SUPPORT HOTLINE

Our technical department will gladly answer any questions you may have about our products. They cannot, however tell you the status of a repair, or handle other customer service situations.

1-800-934-2277

Monday through Thursday, 9AM to 5PM
Friday 9AM to 2PM Eastern.